

Bohrschablone

Bitte beachten Sie, dass der Haken nicht vertikal montiert werden sollte, sondern wie unten erläutert. Um die richtige Position zu bestimmen, benutzen Sie bitte diese (Papier)-Bohrschablone.

SCHRITT 1


Positionieren Sie die Bohrschablone dort, wo Sie den Haken montieren möchten.

SCHRITT 2

Mit Hilfe einer Wasserwaage wird die waagerechte Linie (s.u.) ausgerichtet.

SCHRITT 3

Stechen Sie mit einem Bleistift in die beiden Kreise. Bohren Sie nun in die zwei entstandenen Markierungen auf der Wand Ihre Bohrlöcher (\varnothing 5 mm).

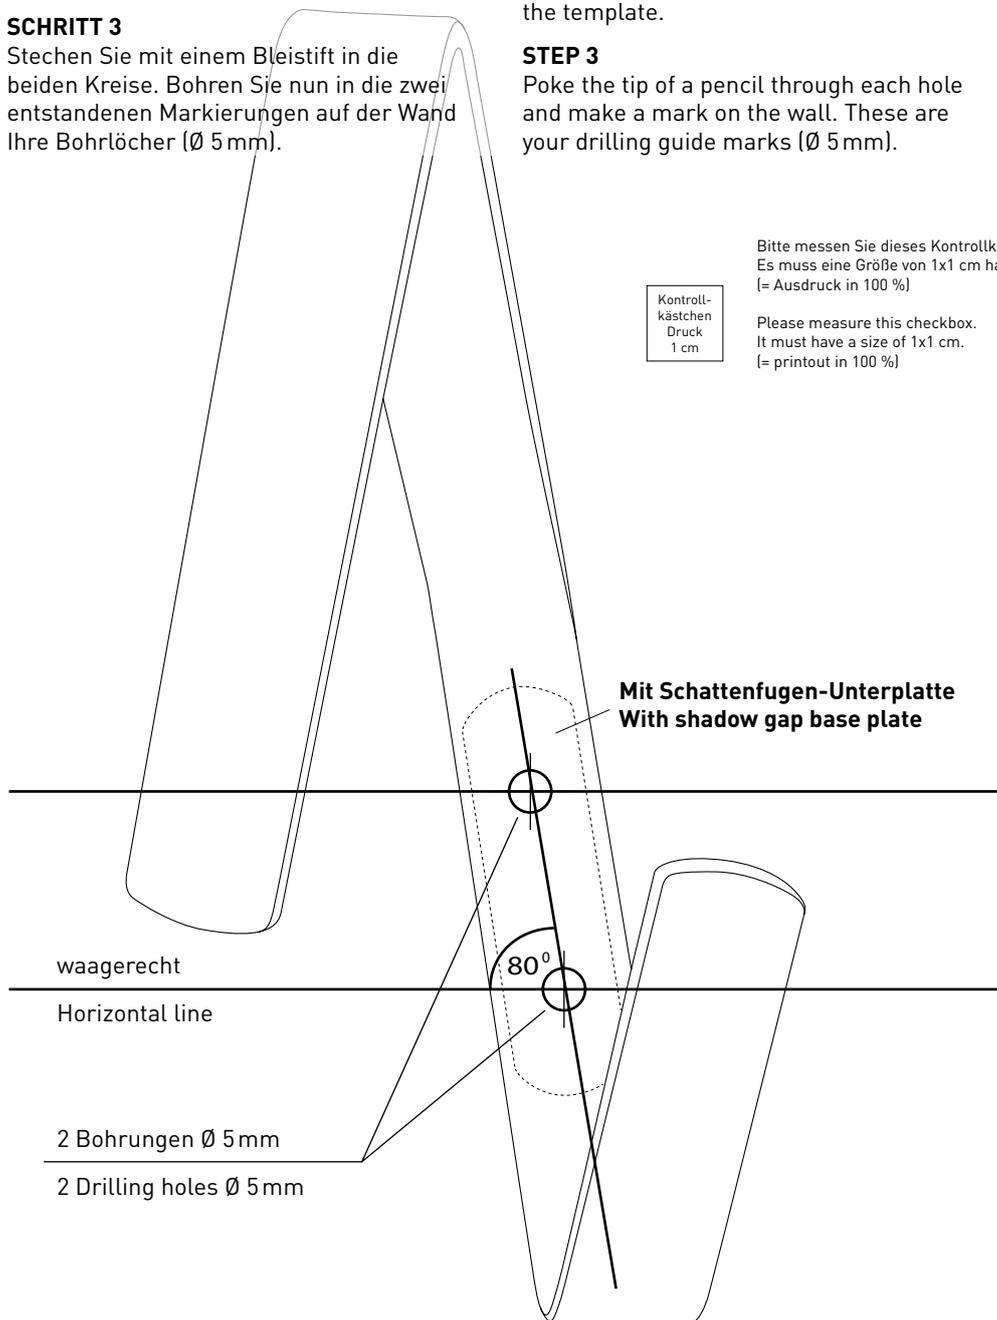

Drilling template

Please note that this hook should not be mounted at a 90-degree angle to the wall but as shown below. In order to ensure you mount the hook in the correct position, please use this paper template for marking the drilling holes.

STEP 1

Place the template where you wish to mount the hook.

STEP 2

With the help of a spirit level align the template with the horizontal line drawn on the template.

STEP 3

Poke the tip of a pencil through each hole and make a mark on the wall. These are your drilling guide marks (\varnothing 5 mm).